



## USB Printer to Centronics Parallel Interface

Printers with USB interfaces are capturing the market with increasing speed. So when the spare parts of your conventional log printers start to run out of stock or the printers as such can no longer be replaced, this is what you can do:

Connect a **Centronics - USB Converter** to your existing printer interfaces with hardly any effort. No machine refitting required. The Centronics - USB Converter is ready to operate in no time, and prints out all logs and graphics with customary USB printers\* in black and white or color.

With the **ipcas Centronics - USB Converter** you can replace your old log printer with a customary USB printer\* very easily without having to install any additional printer drivers. You also do not have to convert your present machines or interfaces. The Centronics - USB Converter is almost maintenance-free, and opens up new opportunities for production plants to connect new log printer generations to older machines. With the compact ipcas converter your task becomes child's play: All you have to do is simply interconnect it.




 Printer



Centronics - USB  
Converter



Centronics parallel  
printer output

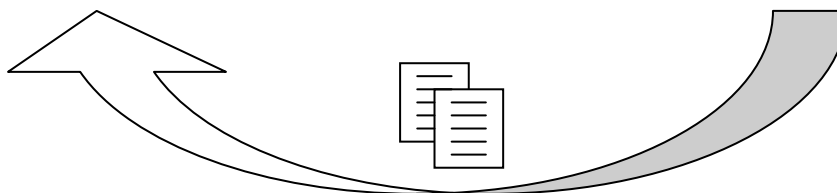


## Optimized paper consumption

Cyclical logging considerably reduces the paper consumption of USB printers, also called page printers. Here the individual print lines are first collected in the **Centronics - USB Converter** and then printed out page by page in DIN A4 standard paper size. Omitted pages can be printed out manually any time by pressing a function push-button.

## Increased data security

To increase data security the converter is equipped with a dynamic printer memory. During failures in the USB printer, more than 100 DIN A4 pages are available as intermediate storage. The accumulated printing data is automatically printed out on paper as soon as the printing failure has been cleared, or alternatively, once a USB Stick is connected to the electronic storage.

## Printing, Saving, Network access

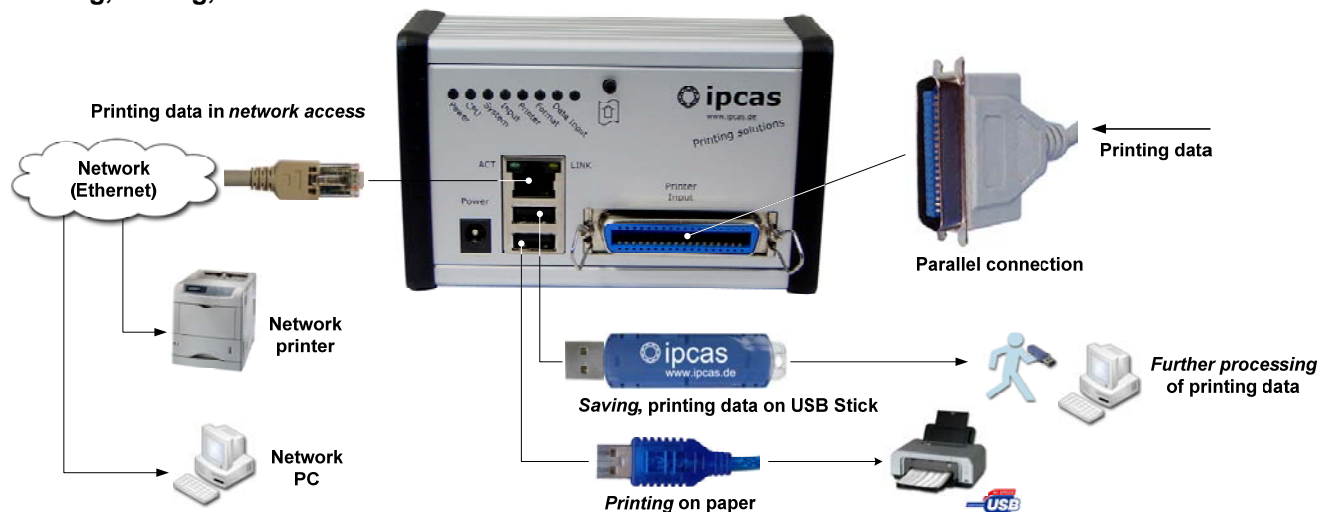

## Easy to configure

Presettings and additional parameters such as activating time stamps for cyclical loggings can be quite easily adapted to or set for the **Centronics - USB Converter**. The configuration program is initiated from the provided USB Stick with a PC, and the parameters are set and saved. All you have to do then is to insert the USB Stick into the Centronics - USB Converter. The Converter takes over the settings independently and stores them internally. Future software updating can be performed with the USB Stick just as easily.

## Specification

Centronics – USB Converter	Desktop model	
Interfaces	<ul style="list-style-type: none"> <li>➤ 1 x</li> <li>➤ 2 x</li> <li>➤ 1 x</li> </ul>	Centronics 36-pin connector, female (printer input) Log / Mode: SPP (Standard Parallel Port) USB 1.1 (printer output and storing on USB Stick) LAN 10/100 BaseT Ethernet, RJ45 connector (network access to printing data)
Function push-button	➤ 1 x	Printing page from print storage
Real-time clock	Battery backed, TCXO, ± 60 sec time freewheeling / year (at 0° - 40° C) ( for time stamp)	
Diagnostics LEDs	Power, system, Centronics, Printing status: input, buffer, print Ethernet: activity and link	
Power supply	9 V DC Input jack	
Casing	Aluminum casing	
Measurements W/H/D	Approx. 126/46/81 mm	
Operating/storage temperature	0° C to 55° C / -10° C to 70° C	
Relative humidity	5 % to 90 %, non-condensing	
Protection rating	IP40	
Standards	CE	
Scope of supply	Centronics – USB Converter, tabletop unit Switching power supply with input jack, Input: 100 – 240 V AC Output: + 9 V DC Configuration software for Windows (2000, XP, Vista), and Manual (German on USB Stick)	
Purchase order number	0202030	

\* Some USB printers feature simple GDI (Graphics Device Interface) technology or offer a very special programming interface. Please note that these printers cannot yet be supported.