



**ROHDE & SCHWARZ**

Fast & Accurate  
 $\mu$ P-controlled error correction

# Millivolt- meter URV 5

DC, 9 kHz to 18 GHz

200  $\mu$ V to 1000 V  
1 nW to 2 kW (50  $\Omega$ )  
-60 to +63 dBm (50  $\Omega$ )  
0 to 400 V DC

**IEC 625 Bus**

IEEE 488



## USES, CHARACTERISTICS

# Millivoltmeter URV 5



The **Millivoltmeter URV 5** is a broadband, sensitive voltage, level and power meter featuring high accuracy and suitable both for manual operation and for use in systems. A great variety of measuring heads and accessories allows the URV 5 to be used for all kinds of measurement:

- With RF probe and DC probe for no-load AC and DC voltage measurements in electronic circuits.
- Voltage (and power) measurements in coaxial 50- $\Omega$  and 75- $\Omega$  systems using the low-reflection and low-loss insertion units (up to 2 GHz).
- Power measurement up to 18 GHz using the power sensors of Power Meter NRV.

**Readout** One or two measuring heads can be connected to the URV 5. The values measured in the two channels can be displayed separately, set off against one another or referred to any reference (A, B, A/B, B/A, A/REF<sub>A</sub>, B/REF<sub>B</sub>). For absolute measurement, four different units can be selected:

volt V    watt W    dBm    dBV

In the case of **relative measurements**, the difference, the difference in percent, the logarithmic difference or the ratio is indicated ( $\Delta V$ ,  $\Delta W$ ,  $\Delta\%$ ,  $\Delta dB$ , X/REF).

**Tendency indication** The Millivoltmeter has a fast tendency indication which follows the variations of the measured values, thus facilitating adjustments and maxima-minima settings.

**Measurement rate** With a test rate of up to 30 measurements/s, the URV 5 is ideally suited for use in systems. For applications requiring a noise-free indication rather than a high measurement rate, the results can be filtered, the measurement rate being then reduced accordingly. The measurement rate can be set in six steps via the filter functions (F0 to F5).

DC, 9 kHz to 18 GHz/200  $\mu V$  to 1000 V

- Two test inputs
- Unexcelled accuracy through  $\mu P$ -controlled error correction:  $\pm 1\%$
- Voltage, level and power measurement; tendency indication
- Probes, insertion units and power sensors may be exchanged as required
- Readout in all conventional units with freely selectable reference impedance; relative measurements
- Frequency-dependent calibration factors are taken into account
- DC output (option)

Scale 1:2.5



**Waveform weighting** The rectifiers used in the AC voltage measuring heads handle an extremely wide dynamic range of the input voltage of more than 90 dB. The partly non-linear transfer characteristic is individually linearized, so that for sinewave voltages the rms value is always read out. Non-sinewave voltages up to about 30 mV are also measured with rms weighting, whereas for voltages above 1 V the result is read out as  $V_{pp}/2\sqrt{2}$  (peak weighting). If dividers are connected ahead of the measuring heads, the specified limits are shifted upwards (300 mV and 10 V for 100-V insertion units).

**PEP measurement** The PEAK (PEP) key is used for reading the peak envelope power of a modulated signal. Signals with a minimum pulse width of 200  $\mu s$  and pulse repetition frequencies down to 0.05 Hz can be measured in this mode.

**Frequency-response correction** Each measuring head is individually calibrated. The test frequency need only be entered via the keyboard or IEC/IEEE bus and the URV 5 will take account of the calibration factor in the measurement result.

**Attenuation correction** The URV 5 automatically takes account of the division factors of the measuring heads. If a plug-on divider or attenuator pad is connected ahead of the measuring head, the corresponding attenuation can be entered and will be taken into account in the result.

**Data input** Upon pressing the SHIFT key, a decimal keypad is available to the user for data entry or for calling up **special functions**, such as:


- display test,
- entry and checking of IEC/IEEE-bus address,
- nonvolatile storage of reference values,
- selection of filters F0 to F5,
- indication of calibration date/recalling of calibration routines,
- transfer of reference value channel A to B and vice versa.

**DC output (option)** This option delivers a DC voltage proportional to the numerical readout. Thanks to the versatile conversion capability of the URV 5, the scale can be linear or logarithmic.

# MEASURING HEADS

The **measuring heads** are individually calibrated and therefore interchangeable without affecting the error limits.

**URV 5-Z1 DC Probe**  
0 to 400 V,  $R_{in} = 9\text{ M}\Omega \parallel 6\text{ pF}$

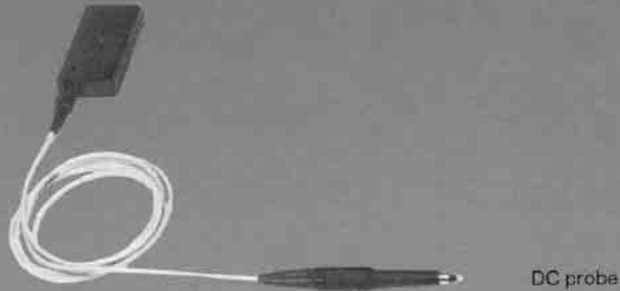

**URV 5-Z7 RF Probe with ground cable and clip, ground sleeve, ground strip, hook tip and solder tip**

without plug-on divider  
200  $\mu\text{V}$  to 10 V, 20 kHz to 1 GHz

with **20-dB plug-on divider** (URV-Z6)  
2 mV to 100 V, 1 to 500 MHz

with **40-dB plug-on divider** (URV-Z6)  
20 mV to 1000 V, 500 kHz to 500 MHz

with **BNC adapter** (URV-Z6) with or without plug-on divider, for voltage measurement on 50- $\Omega$  coaxial lines

with **50- $\Omega$  adapter** (URV-Z50)  
200  $\mu\text{V}$  to 10 V, 20 kHz to 1 GHz  
RF voltage measurement with integrated termination in 50- $\Omega$  coaxial systems

with **75- $\Omega$  adapter** (URV-Z3)  
200  $\mu\text{V}$  to 10 V, 20 kHz to 500 MHz  
RF voltage measurement with integrated termination in 75- $\Omega$  coaxial systems (adaptable connectors)



RF probe (1) with accessories: ground cable and clip (2); ground sleeve (3); ground strip (4); hook tip (5); solder tip (6); 75- $\Omega$  adapter (7) with BNC adapter, adapter to 1.6/5.6 connectors (8) and to 2.5/6 connectors (9); BNC adapter (10) with reducer sleeve (11) for plug-on dividers (12, 13); 50- $\Omega$  adapter (14) with BNC adapter (15) to BNC connectors; case (16);  
\*) supplied with RF Probe URV 5-Z7

**URV 5-Z9 Dual Directional Coupler, 50  $\Omega$**   
100 kHz to 80 MHz, 10  $\mu\text{W}$  to 2 kW  
Coupling of forward and reflected power; in conjunction with two RF Probes URV 5-Z7 for measurement of directional power and reflection



Dual directional coupler

**URV 5-Z2 10-V Insertion Unit, 50  $\Omega$**   
200  $\mu\text{V}$  to 10 V  
9 kHz to 2 GHz (model 55)  
9 kHz to 1 GHz (model 04)  
RF voltage measurement with **low reflection coefficient** in 50- $\Omega$  coaxial systems



10-V insertion unit

**URV 5-Z4 100-V Insertion Units, 50 and 75  $\Omega$**   
2 mV to 100 V  
100 kHz to 2 GHz, 50  $\Omega$  (model 55)  
100 kHz to 1 GHz, 50  $\Omega$  (model 04)  
100 kHz to 2 GHz, 75  $\Omega$  (model 75)  
RF voltage measurement in 50- $\Omega$  and 75- $\Omega$  coaxial systems for higher voltages and with extremely low reflection coefficient; power measurements up to 200 W (130 W) possible with suitable termination

**NRV-Z1 1-nW Power Sensor, 50  $\Omega$**   
1 nW to 20 mW, 10 MHz to 18 GHz


**NRV-Z2 Precision Power Sensor, 50  $\Omega$**   
100 nW to 500 mW, 10 MHz to 18 GHz  
VSWR < 1.05 up to 4 GHz, < 1.2 up to 18 GHz

**NRV-Z3 400-pW Power Sensor, 75  $\Omega$**   
400 pW to 13 mW, 1 MHz to 2.5 GHz




Power sensor

# OPERATION

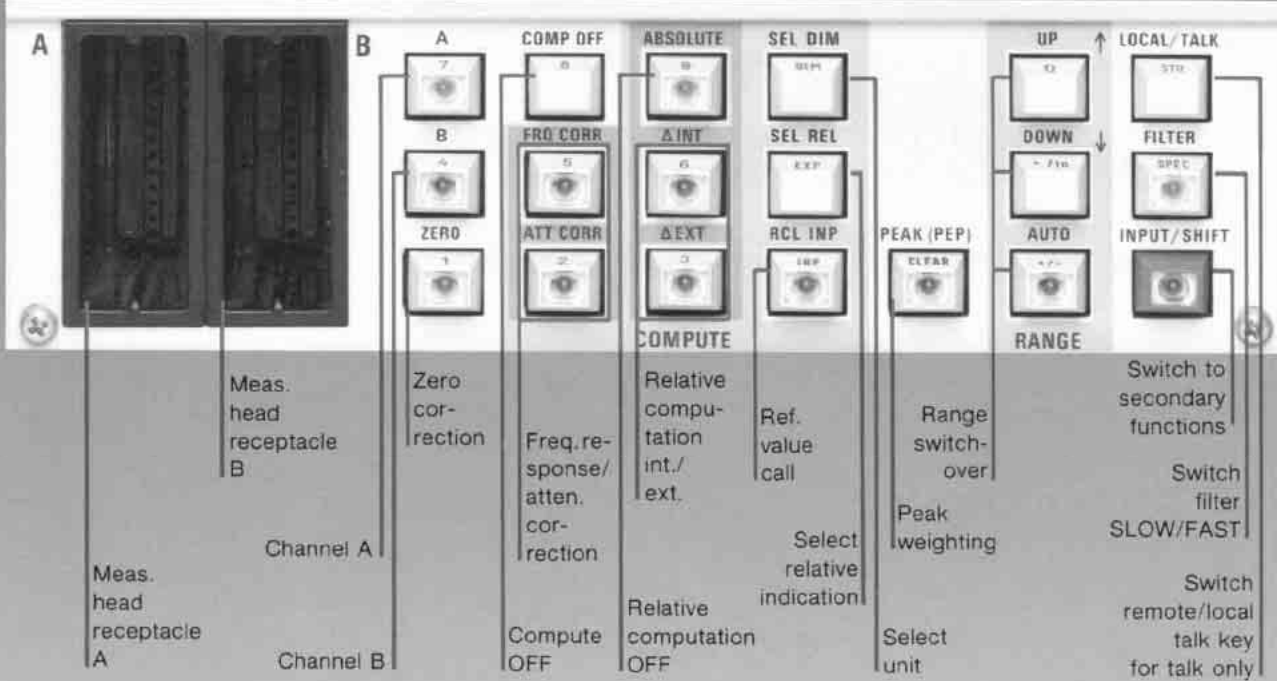

Selection of filter functions  
SLOW (F2) ↔ FAST (F4)  
F0 to F5:

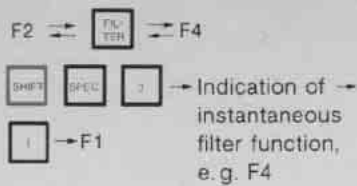

Call of a special function e.g. LED test




IEC-bus address indication of address set




Reference correction values

Indication: reference or correction values for selected channel

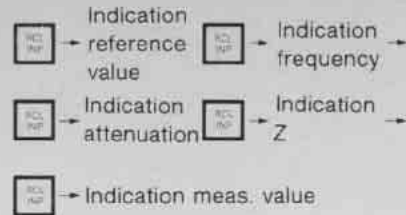

Storage of reference value, e.g. 150 mV for channel set

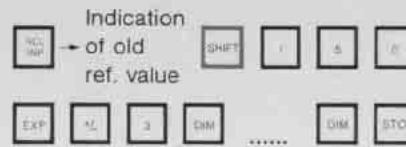

Transfer of instantaneous meas. value as reference



Nonvolatile storage of all reference, correction and impedance values (both channels)



Blue: secondary functions

## Input pointer

Command code	Function
IA IB	Input for channel A valid Input for channel B valid  Note: With commands marked by * it is possible to define the input channel — independent of the selected measurement channel — for all subsequent commands by sending IA or IB once in the command string (resetting by delimiter or PA, PB)

## Setting commands

Command code	IA, IB	Function
C0	-	Reading in of test data into basic unit (= DCL, SDC after addressing)
C1	-	Basic setting: PA (PB), E0, F2, KA0, KF0, RG0, U0, H0, N0 Q0, W3, Y1 Note: Resetting of input pointers IA, IB
E0 E1	* *	Off On PEAK (PEP) measurement
F0 F1 F2 F3 F4 F5	* * * * *	SLOW } 4 1/2-digit measurement FAST } digit display speed SUPERFAST } 3 1/2-digit display
KF0 KF1 KA0 KA1	* * * *	FRQ CORR off FRQ CORR on } corrective ATT CORR off } evaluation ATT CORR on } (It is also possible to send KF01 instead of e.g. KF1)
N0 N1	- -	Output with } alpha header Output without }
O1	*	Triggering ZERO meas
PA PB	- -	Probe A } Setting of Probe B } measurement Note: Resetting of input pointers IA, IB } channel
RG, RG0 RG1 RG2 RG3 RG4	* * * * *	Autorange 10 mV 100 mV 1 V 100 mV 1 V 10 V 1 V 10 V 100 V 10 V 100 V 1000 V  AC probe, 10-V insertion unit } 100-V insertion units } DC probe (It is also possible to send RG03 instead of e.g. RG3)
U0 U1 U2 U7	* * * *	V dBm dBV W } Output unit (ABSOLUTE)
U3 [[W] [X]] U4 [[W] [X]] U5 [[W] [X]] U6 [[W] [X]]	* * * *	$\Delta$ lin } in V referred } Output $\Delta$ % } to internal } unit $\Delta$ dB } reference } (relative) X/Ref } value  Note: The letters X and/or W can be added to the commands U3 to U6. X = $\Delta$ EXT (reference = second channel) W = relative readout in W, e.g. U3X or U6WX
Y0 Y1 YX	- - -	off } Cyclical on } temperature Triggering } measurement
Y?	-	Read-out of set status, i.e. if cyclical temperature measurement is switched on or off (output via SRQ)

## Data input commands

DU (DATUM) DV (DATUM) DB (DATUM) DM (DATUM) DW (DATUM)	* * * * *	Reference value in V Reference value in V Reference value in dBV Reference value in dBm Reference value in W } Data input
DR (DATUM)	*	Reference impedance in $\Omega$

## Data input commands (continued)

Command code	IA, IB	Function
DZ (DATUM)	*	Reference impedance in $\Omega$
DA (DATUM) DF (DATUM)	* *	Correction attenuation in dB Correction frequency in Hz
D- D-AA D-BB	* - -	Data copying to channel IA, IB Data copying values B same as in channel A Data copying values A same as in channel B

## Interface commands

W0 W1 W2 W3 W4 W5 W6 W7 W8	- - - - - - - - -	NL CR ETX CR + NL EOI NL + EOI CR + EOI ETX + EOI CR + NL + EOI	Delimiters for string output
Q0 Q1 Q2 Q3	- - - -	off on (all SRQ) on (except for SRQ (80) < meas. value ready, all SRQ (only error SRQ, >= 96)	Call of SRQ
H0 H1	- -	off on	Auxiliary mode (PET time-out correction)

## Trigger commands

X0 X1 X2 X3 X4 X8	- - * - - -	Reset command for commands X3/X4 Trigger command (= GET) Trigger command + storage of measured value as reference value Setting command for triggering measurement upon a service request Setting command for continuous triggering Trigger command for both measurement channels (measured values are separated by delimiters [corresponding to W0 to W8])
Z0 Z1 Z2 Z3	* * * *	Output of reference value Output of reference impedance Output of correction frequency Output of correction attenuation

## Special commands

S0 S4 S5 S6 ST	- - - - *	LED test of display Indication of date under which the calibration values have been stored Output of error code according to hardware function errors occurred Checksum output of program memory Status output of all device settings for the selected channel
----------------------------	-----------------------	--

## Keywords

CALIBRATION	Switchover between measurement and calibration mode: only commands for calibration are valid (CA...)
-------------	--

## Separators and delimiters

Symbol	Designation	ASCII decimal equivalent	Recommended use
CR	Comma	44	Separator between commands Delimiters
NL	Carriage Return	13	
ETX	New Line	10	
EOI		3	
If the EOI line is set during the transfer of the last character, this is also accepted as delimiter.			

# SPECIFICATIONS

## Basic Unit

(Unless otherwise stated, all specifications refer to voltage readout in V)

Test channels	2 (A and B), independent of each other, separately adjustable
Measuring heads	all intelligent measuring heads for URV 5 and NRV can be used
Measurement range	> 94 dB (4 ranges in 20-dB steps)
Measurement mode	A, B
absolute	A/REF <sub>A</sub> , B/REF <sub>B</sub> , A/B, B/A
relative	
Readout mode	V, W, dBm, dBV
absolute	$\Delta V$ , $\Delta W$ , $\Delta \%$ , $\Delta \text{dB}$ , X/REF
relative	$\pm 19,999 \times 10^{-18}$
Display range	0.01% (0.1%) <sup>1)</sup> of nominal measurement range with readout in V; 0.01 dB with readout in dBm, dBV or $\Delta \text{dB}$ ; 0.01% with readout in $\Delta \%$
Resolution	
Error limits	
18 to 28 °C	$\pm 0.15\%$ of rdg per channel
Additional error due to temperature	
10 to 40 °C	$\pm 0.25\%$ of rdg per channel
0 to 50 °C	$\pm 0.5\%$ of rdg per channel
Filter	adjustable <sup>2)</sup> in 6 steps (F0 to F5) via keyboard or remote-controlled, duration approx. 4 s <sup>2)</sup>
Zero adjustment	approx. 1 measurement/s with filter F0 up to 30 measurements/s with filter F5 <sup>2)</sup>
Measurement rate (manual)	approx. 0.05 s with filter F5 up to 20 s with filter F0 <sup>2)</sup> with dual-channel measurement sum of the individual times as maximum, no switchover delay; all measurements triggered via IEC/IEEE bus are in steady state, even in case of range switchover
Measurement time (IEC/IEEE bus)	
PEP measurement	
Pulse width approx.	200 $\mu\text{s}$ to CW
Minimum pulse repetition frequency	

Filter	F0	F1	F2	F3	F4	F5
$f_{\text{max}}$ Hz	0.05	0.25	1	5	25	100

Frequency-response correction	can be selected for all AC voltage and power measuring heads, frequency response of measuring head is accounted for after entry of test frequency, one frequency per channel can be entered
Attenuation correction	can be switched on for all measuring heads; one attenuation value per channel can be entered (-199.99 to +199.99 dB)
Reference values	one reference value per channel for relative measurements (REF <sub>A</sub> , REF <sub>B</sub> ) entry via keyboard, IEC/IEEE bus or transfer of measured value for computation and indication of power and power level, one value per channel can be entered ( $10^{-6}$ to $10^6 \Omega$ ), automatic initialization with impedance value (50/75 $\Omega$ ) of power sensors for NRV and insertion units URV 5-Z2/24
Reference impedance	
Remote control interface	IEC 625-1 (IEEE 488) for control of all device functions
Interface functions	SH1, AH1, TS, L4, SR1, RL1, DC1, DT1, PP1
General data	
Operating temperature range	0 to +50 °C, class I to IEC 359 (no dewing)
Storage temperature range	-40 to +70 °C
Power supply	100/120/220/240 V $\pm 10\%$ 47 to 63 Hz, 400 Hz (30 VA)
Dimensions, weight	241 mm $\times$ 110 mm $\times$ 340 mm, 4.4 kg
Option DC Output URV 5-B2	
Output impedance	1 k $\Omega$
Output voltage range (EMF)	-1.999 to +1.999 V
Resolution	1 mV (10 digits)
Error	$\pm 2$ mV

## Measuring heads and measurement functions

(All specifications without errors of basic unit)

### DC voltage measurement

### — using DC Probe URV 5-Z1

Voltage measurement range	0 to 400 V
Input impedance	9 M $\Omega$    6 pF
Maximum load	400 V

<b>General data</b>	
Dimensions, weight	15 mm dia. $\times$ 125 mm, 80 g
Length of connecting cable	1.2 m
Temperature range	see basic unit URV 5

Nominal range	Resolution <sup>1)</sup>	Max. reading	Error limits 18 to 28 °C
1 V	100 $\mu\text{V}$	1.2200 V	$\pm (0.15\%$ of rdg + 5 digits)
10 V	1 mV	12.200 V	$\pm (0.15\%$ of rdg + 1 digit)
100 V	10 mV	122.00 V	$\pm (0.15\%$ of rdg + 1 digit)
400 V	100 mV	420.00 V	$\pm (0.35\%$ of rdg + 1 digit)

Additional error due to temperature	
10 to 40 °C	$\pm 0.25\%$ of rdg
0 to 50 °C	$\pm 0.5\%$ of rdg

<b>Filter-dependent data</b>	
Filter	
Series-mode rejection 50 (60) Hz $\pm 0.05\%$ in dB	
Measurement rate (manual) <sup>2)</sup>	
Measurement time (IEC/IEEE bus), trigger to output of 1st byte <sup>3)</sup>	

F0	F1	F2	F3	F4	F5
64 (15)	64 (15)	64 (15)	64 (15)	64 (15)	—
1/s	2/s	5/s	9/s	15/s	31/s
13 s	3.2 s	0.8 s	0.22 s	0.07 s	0.034 s

### AC voltage measurement

### — using Insertion Unit URV 5-Z2

Voltage measurement range	200 $\mu\text{V}$ to 10 V
Level/power measurement range	-60 to +33 dBm/1 nW to 2 W
Frequency range	9 kHz to 2 GHz (model 55) 9 kHz to 1 GHz (model 04)
Characteristic impedance	50 $\Omega$
Max. input voltage rms (sinewave)	15 V
peak	22 V
DC	50 V

Maximum reflection coefficient and VSWR (model 04 up to 1 GHz)

	DC	200 MHz	500 MHz	1 GHz	1.6 GHz	2 GHz
r/%	1	2	7	10	15	
VSWR	1.02	1.04	1.15	1.22	1.35	

<b>General data</b>	
Connectors	N male, N female
Dimensions, weight	85 mm $\times$ 115 mm $\times$ 30 mm, 0.35 kg
Length of connecting cable	1.2 m
Temperature range	see basic unit

Footnotes see page 7.

Nominal range	Resolution <sup>1)</sup>	Max. reading	Error limits 18 to 28 °C
10 mV	1 $\mu\text{V}$	12.200 mV	$\pm (0.3\%$ of rdg + 3 digits + frequency response error + zero error)
100 mV	10 $\mu\text{V}$	122.00 mV	
1 V	100 $\mu\text{V}$	1.2200 V	
10 V	1 mV	10.500 V	

Frequency response error in % of rdg

	9 kHz	20 kHz	50 kHz	30 MHz	100 MHz	200 MHz	500 MHz	1 GHz	2 GHz
Model 55	6 <sup>1)</sup>	2	0.5	1.5	2	3	5	7 <sup>1)</sup>	7 <sup>1)</sup>
				1.5	2	5	11	18	1 <sup>1)</sup>
Model 04	6 <sup>1)</sup>	2	0.5	1.5	2	3	5	7 <sup>1)</sup>	
				1.5	2	6	13	1 <sup>1)</sup>	

Zero error, display noise, measurement rate and additional error due to temperature see additional data for AC voltage measurement on back cover

## Measuring heads and measurement functions (continued)

### AC voltage measurement

— using Insertion Unit URV 5-Z4

Voltage measurement range	2 mV to 100 V
Level measurement range	-40 to +53 dBm (models 55 and 04) -42 to +51 dBm (model 75) 100 nW to 200 W (models 55 and 04) 50 nW to 130 W (model 75)
Power measurement range	100 kHz to 2 GHz (models 55 and 75) 100 kHz to 1 GHz (model 04)
Frequency range	50 Ω (models 55 and 04) 75 Ω (model 75)
Characteristic impedance	150 V rms (sinewave) 220 V peak 1000 V DC
Max. input voltage	

Maximum reflection coefficient and VSWR

		MHz				GHz
		DC	200	500	1	
Model 55	r/%	1		2		3
	VSWR	1.02		1.04		1.06
Model 04	r/%	1		2		
	VSWR	1.02		1.04		
Model 75	r/%	1.5	2	3		5
	VSWR	1.03	1.04	1.06		1.11

Nominal range	Resolution <sup>1)</sup>	Max. reading	Error limits 18 to 28 °C
100 mV	10 μV	122.00 mV	±(0.3% of rdg + 3 digits + frequency response error + zero error)
1 V	100 μV	1.2200 V	
10 V	1 mV	12.200 V	
100 V	10 mV	105.00 V	

Frequency response error in % of rdg

		kHz				MHz					
		100	200	500	1	30	200	500	1	1.6	2 GHz
Model 55	15%)	6%)	2	1	1.5	2	4	6	8 <sup>1)</sup>	11	
					2	5	7	10	18	18	
Model 04	15%)	6%)	2	1	1.5	2	4	7 <sup>1)</sup>			
					2	6	9	11			
Model 75	20%)	8%)	2	1	2	2.5	5	7	10 <sup>1)</sup>	11	
					2	5	7	12	20	20	

Zero error, display noise, measurement rate and additional error due to temperature see additional data for AC voltage measurement on back cover

#### General data

Connectors	N male, N female
Dimensions, weight	85 mm × 115 mm × 30 mm, 0.35 kg
Length of connecting cable	1.2 m
Temperature range	see basic unit

### AC voltage measurement

— using RF Probe URV 5-Z7

RF probe	without plug-on divider	with 20-dB plug-on divider	with 40-dB plug-on divider	with 50-Ω adapter	with 75-Ω adapter
Voltage measurement range	200 μV to 10 V	2 mV to 100 V	20 mV to 1000 V	200 μV to 10 V	200 μV to 10 V
Level measurement range 50 (75) Ω	-60 to -33 dBm	-40 to +53 dBm	-20 to +73 dBm	-60 to -33 dBm	-62 to -31 dBm
Power measurement range 50 (75) Ω	1 nW to 2 W	100 nW to 200 W	10 μW to 20 kW	1 nW to 2 W	(500 pW to 1.3 W)
Frequency range	20 kHz to 1 GHz	1 to 500 MHz	0.5 to 500 MHz	20 kHz to 1 GHz	20 kHz to 500 MHz
Input impedance C <sub>in</sub>    R <sub>in</sub> (f = 10 MHz)	2.5 pF    > 80 kΩ	1 pF    > 1 MΩ	0.5 pF    > 10 MΩ	50 Ω	75 Ω
Max. input voltage rms (sinewave)	15 V	150 V	1050 V	10 V	12 V
peak	22 V	220 V	1500 V	22 V	22 V
DC	400 V	1000 V	1000 V	10 V	12 V

Maximum reflection coefficient and VSWR (adapter with probe)

		MHz					
		DC	50	100	200	500	700
50-Ω adapter	r/%	1.5	3	5	10	18	
	VSWR	1.03	1.06	1.11	1.22	1.44	
75-Ω adapter (with BNC connector)	r/%	1.5		3	10		
	VSWR	1.03		1.06	1.22		

Nominal range	Resolution <sup>1)</sup>	Max. reading	Error limits 18 to 28 °C
10 mV	1 μV	12.200 mV	±(0.3% of reading + 3 digits + frequency response error + zero error)
100 mV	10 μV	122.00 mV	
1 V	100 μV	1.2200 V	
10 V	1 mV	10.500 V	

Frequency response error in % of rdg

		kHz				MHz							
		20	50	100	200	500	1	2	30	100	200	500	1 GHz
RF probe with 50-Ω adapter	10%)	2	1.5			1			2	3	7	11 <sup>1)</sup>	11
									2	4	10	20	20 <sup>1)</sup>
75-Ω adapter (with BNC connector)	10%)	2	1.5			1			2	4	12		
RF probe with BNC adapter	10%)	2	1			0.5			1.5	3	12		
and with 20-dB plug-on divider									20%)	12	15	20	
40-dB plug-on divider									20%)	7	10	15	

Zero error, display noise, measurement rate and additional error due to temperature see additional data for AC voltage measurement on back cover

#### General data

Dimensions, weights	
Probe	18 mm dia. × 100 mm, 140 g
Plug-on divider	10 mm dia. × 45 mm, 7 g
BNC adapter	30 mm × 50 mm, 45 g
50-Ω adapter	16 mm dia. × 50 mm, 30 g
75-Ω adapter	16 mm dia. × 75 mm, 50 g
Length of connecting cable	1.25 m
Temperature range	see basic unit

<sup>1)</sup> Filter F5.

<sup>2)</sup> Further details see measuring heads and measuring functions.

<sup>3)</sup> With filters F0 to F4.

<sup>4)</sup> Without range switchover, 1 channel.

<sup>5)</sup> The additional error due to temperature stated in the additional data may be exceeded at temperatures above 28 °C.

<sup>6)</sup> ±3% for 1 to 10 V.

<sup>7)</sup> With frequency response correction (linear interpolation between calibration frequencies).

Calibration frequencies: 32/40/50/64/80/100/120/160/200/250/320/400/500/600/700/800/900/1000/1100/1200/1300/1400/1500/1600/1700/1800/1900/2000 MHz  
1100 to 2000 MHz models 55 and 75 only.

<sup>8)</sup> Without frequency response correction.

<sup>9)</sup> ±5% for 10 to 100 V.

<sup>10)</sup> ±7% for 1 to 10 V.

<sup>11)</sup> With frequency response correction (linear interpolation between calibration frequencies).

Calibration frequencies: 32/40/50/64/80/100/120/160/200/250/300/350/400/450/500/550/600/650/700/750/800/850/900/950/1000 MHz.

# SPECIFICATIONS, ORDERING INFORMATION

## Measuring heads and measurement functions (continued)

### AC voltage measurement

### — additional data

Measurement rate


Filter	F0	F1	F2	F3	F4	F5
Measurement rate (manual operation)	1/s	1.5/s	3/s	5/s	10/s	16/s
Measuring time (IEC/IEEE bus), trigger to output of 1st byte	22 s	5.5 s	1.4 s	0.36 s	0.10 s	0.065 s

Red curves: display noise<sup>(2)</sup> (double standard deviation, observation time 1 min, temperature of measuring head 18 to 28 °C, approx. double values at 0 °C) ▶

Black curve: zero error<sup>(2)</sup> (1 h after zero adjustment, ±1 °C; after warmup of 2 hours with measuring head connected) ▶

Additional error due to temperature

10 to 40 °C	±2% of rdg
0 to 50 °C	±5% of rdg

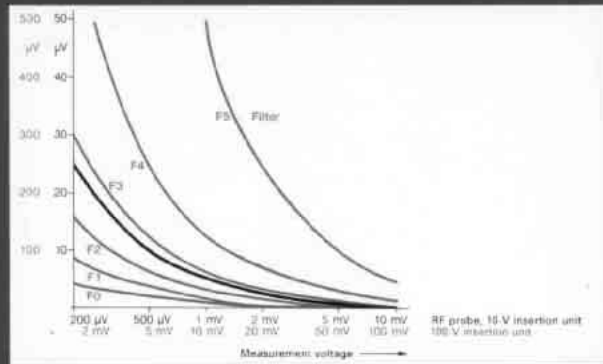


### Directional power and reflection measurement — using Dual Directional Coupler URV 5-Z9 and 2 RF Probes URV 5-Z7

Level/power measurement range ... -20 to +63 dBm/10 µW to 2 kW  
 Minimum forward power required for reflection measurements ... 50 mW (17 dBm)  
 Frequency range ... 100 kHz to 80 MHz  
 Characteristic impedance ... 50 Ω  
 Coupling (nominal value) ... 40 dB

Insertion loss ... ≤ 0.015 dB  
 Reflection coefficient  
 0.1 to 30 MHz ... ≤ 1% (VSWR ≤ 1.02)  
 30 to 80 MHz ... ≤ 1.5% (VSWR ≤ 1.03)  
 Max. permissible forward power P<sub>F</sub> ... see diagram

Error limits in dB for forward power measured with reflection-free load (18 to 28 °C)

0.1	0.2	0.4	30	50	80 MHz
±0.20	±0.15	±0.10	±0.15	±0.20	(3)
-1/+0.2	-0.4/+0.2	±0.2	±0.35	±0.8	(4)

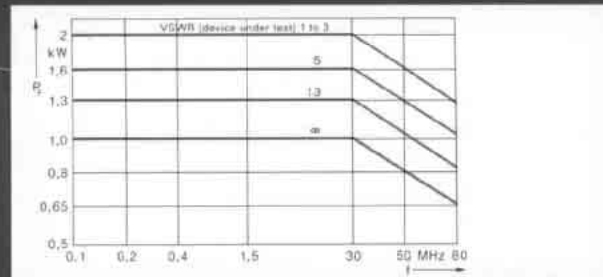

Display noise and zero error see page 7 (RF probe), taking into account the coupling

Additional error due to temperature incl. RF Probe URV 5-Z7  
 10 to 40 °C ... ±0.2 dB  
 0 to 50 °C ... ±0.5 dB

Minimum directivity in dB (typ. values in parentheses)

0.1	0.2	0.4	30	50 MHz	80
23(30)	28(35)	35(40)	30(35)	20(30)	

General data  
 Connectors ... N male, N female  
 Dimensions, weight ... 118 mm × 102 mm × 45 mm, 0.5 kg  
 Temperature range ... see basic unit URV 5

### Power measurement

### — using Power Sensors NRV-Z1/-Z2/-Z3

See page 3, detailed information in data sheet 828251 of Dual-channel Power Meter NRV

## Ordering information

Order designation ▶ Millivoltmeter URV 5  
 394.8010.02  
 Option DC Output ... URV 5-B2 ... 395.0112.02  
 19" Rack Adapter ... ZZA-12 ... 079.0631.00

### Measuring heads

DC Probe with ground cable, clamp-on tip and BNC adapter ... URV 5-Z1 ... 395.0512.02  
 10-V Insertion Unit  
 50 Ω, 2 GHz (model 55) ... URV 5-Z2 ... 395.1019.55  
 50 Ω, 1 GHz (model 04) ... URV 5-Z2 ... 395.1019.04  
 100-V Insertion Unit  
 50 Ω, 2 GHz (model 55) ... URV 5-Z4 ... 395.1619.55  
 50 Ω, 1 GHz (model 04) ... URV 5-Z4 ... 395.1619.04  
 75 Ω, 2 GHz (model 75) ... URV 5-Z4 ... 395.1619.75

### RF Probe

with ground cable and clip, ground sleeve and strip, hook tip and solder tip, in case ... URV 5-Z7 ... 395.2615.02

### Power Sensor

50 Ω, 18 GHz, 20 mW ... NRV-Z1 ... 828.3018.02  
 50 Ω, 18 GHz, 500 mW ... NRV-Z2 ... 828.3218.02  
 75 Ω, 2.5 GHz, 13 mW ... NRV-Z3 ... 828.3418.02

### Recommended extras for RF probe

Accessory Set comprising plug-on dividers 20 dB/40 dB, BNC adapter, reducing sleeve for dividers ... URV-Z6 ... 292.5364.02  
 50-Ω Adapter (BNC female connector) with adapter to BNC connector ... URV-Z50 ... 394.9816.50  
 75-Ω Adapter with adapters to BNC connector, 2.5/6 connectors and 1.6/5.6 connectors ... URV-Z3 ... 243.9118.70  
 Dual Directional Coupler 2 kW, 0.1 to 80 MHz ... URV 5-Z9 ... 265.5315.02

### Servicing aids

Service Kit for calibration of basic units URV 5 and NRV ... UZ-8 ... 394.9968.02

<sup>(2)</sup> Higher values with plug-on dividers and attenuation correction.  
<sup>(3)</sup> Taking into account calibration values for coupling, including probe error.  
 Calibration frequencies: 0.1/0.15/0.2/0.3/0.4/0.45/0.5/0.7/1/1.5/3/5/10/20/30/40/50/60/70/80 MHz

<sup>(4)</sup> When using nominal coupling of 40 dB, including probe error.